



KPT-732

**1080P DUAL CHANNEL DASH CAM
WITH HD REAR CAMERA**



USER MANUAL

YOUR EYEWITNESS ON THE ROAD™



CONTENTS

1.0 CAUTION.....	6
2.0 BATTERY WARNING.....	7
3.0 FEATURES	9
4.0 PRODUCT INFORMATION.....	9
5.0 INTRODUCTION.....	9
6.0 PACKAGE CONTENTS	10
7.0 PRODUCT OVERVIEW	11
8.0 GETTING STARTED	12
8.1 INSERTING YOUR MICRO SD CARD.....	12
8.2 REMOVING YOUR MICRO SD CARD	13
9.0 MOUNTING THE KPT-732 ON YOUR WINDSCREEN	13
10.0 CONNECTING THE REAR CAMERA.....	14

11.0	CONNECTING YOUR KPT-732 TO POWER.....	15
12.0	POWERING THE DEVICE ON/OFF	16
13.0	MANUAL POWER ON/OFF AND RESET	16
13.1	MANUAL POWER ON.....	16
13.2	POWER OFF	16
13.3	RESET THE DEVICE	16
13.4	INITIAL SETTINGS	16
13.5	SET THE TIME AND DATE	17
13.6	G-SENSOR SENSITIVITY	18
14.0	USING THE CAR DASH CAM.....	19
14.1	RECORDING VIDEOS.....	19
14.1.1	RECORDING VIDEOS WHILE DRIVING	19
14.1.2	EMERGENCY RECORDING	20
14.1.3	RECORDING SCREEN	20

14.2	RESOLUTION.....	21
14.3	MOVIE CLIP TIME.....	22
14.4	RECORD AUDIO.....	23
14.5	G-SENSOR SENSITIVITY	24
14.6	WHITE BALANCE	25
14.7	KEY BEEPS.....	26
14.8	DATE AND TIME.....	27
14.9	DATE FORMAT	28
14.10	LANGUAGE.....	29
14.11	SCREEN SAVER	30
14.12	DEFAULT SETTINGS	31
14.13	FORMAT THE INSERTED MICRO SD CARD.....	32
15.0	PHOTO MODE.....	33

16.0	PLAYBACK.....	33
16.1	PC PLAYBACK	34
16.2	MENUS.....	35
17.0	WARRANTY TERMS & CONDITIONS.....	38

1.0 CAUTION

- Ensure you are using your Car Dash Cam within your countries' road laws. Please make sure you are familiar with your local road legislation before use.
- Avoid leaving your Dash Cam in direct sunlight for extended periods of time in an unventilated space.
- Please set time and date before you use this device to record.
- The notifications given by the Car Dash Cam are suggestions only, please drive to the actual conditions.
- The values displayed in this system, such as speed, position, and the distance warning, may be affected by the surrounding environment.
- The system is to be used only for non-commercial use, within the limits permitted by the relevant laws.
- Avoid using the Car Dash Cam near any devices that emit radio interference (e.g. Microwave Ovens).
- It is considered normal operation for the Car Dash Cam to get warm during use.

2.0 BATTERY WARNING

- Always charge the Car Dash Cam using the provided charger. Improper charging of the Car Dash Cam and may result in failure of the internal battery.
- Never dismantle the Car Dash Cam or expose the internal battery.
- Do not dispose of the Car Dash Cam in fire.
- Dispose of the Car Dash Cam observing local regulations being mindful of the internal battery.
- Do not attempt to replace or expose the internal battery.

NOTES ON INSTALLATION

- It is advised that the Car Dash Cam is installed near the rear view mirror, at the top centre of the windshield for optimal operation.
- Make sure that the lens is within the range of the windscreen wiper to ensure a clear view when it rains.
- Do not touch the lens with your fingers. Finger prints left on the lens will result in unclear videos or photos. If photos or videos are blurred, please clean the lens gently with a microfibre cloth.
- Do not install the device on a tinted window. Doing so may damage the tint film.
- Make sure that the installation position does not hinder or block the field of view.
- Only use the included cable to power the Car Dash Cam.
- The KPT-732 is designed to be constantly connected to the included power supply and is NOT designed to be used solely with the camera's built in battery.

3.0 FEATURES

- 1080P Front facing recording
- 720P rear facing recording
- Super Capacitor
- Up to 64GB Card Capacity (Micro SD Card not included)
- 3.0" LCD screen
- Automatic Emergency recording when a collision is detected
- 150° Wide angle lens (front camera)

 
4.0 PRODUCT INFORMATION

For latest manual and product updates please visit our website at www.kapturecam.com.au or www.kapturecam.co.nz


5.0 INTRODUCTION

Thank you for purchasing a Kapture Car Dash Cam. Please read through these instructions before attempting to install or use this product.

6.0 PACKAGE CONTENTS



Dash
Camera

 


Rear
Camera



Mounting
Bracket



 6m Rear
Camera Cable




DC Power
Cable



User
Manual

 7.0 PRODUCT OVERVIEW

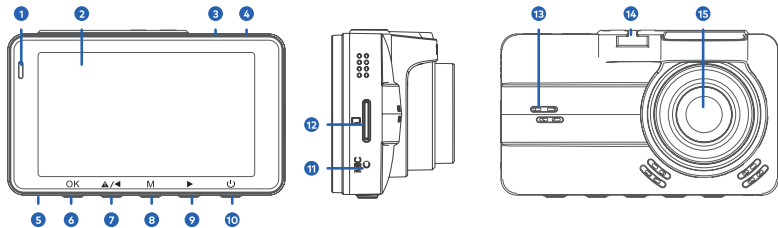

- | | | |
|-------------------------|---------------------|------------------------|
| 1. Indicator Light | 6. OK Button | 11. Microphone |
| 2. 3.0" LCD Screen | 7. Up Button | 12. Micro SD Card Slot |
| 3. Power Input | 8. Menu/Mode Button | 13. Speaker |
| 4. External Camera Port | 9. Down Button | 14. Mounting slot |
| 5. Reset Button | 10. Power button | 15. Lens |

8.0 GETTING STARTED

8.1 INSERTING YOUR MICRO SD CARD.

With the screen view towards you, insert your Micro SD Card with the pins facing toward you. Push the memory card in until you hear a click locking the Micro SD Card in Position.

NOTES:

- Do not remove or insert the Micro SD Card when the device is turned on. This may damage your Micro SD Card.
- Please use a Class 6 or higher rated Micro SD card, 16GB or above (up to 64GB).
- Please format the Micro SD card before the initial use.
- Micro SD Card not included.

8.2 REMOVING YOUR MICRO SD CARD

Ensure that the KPT-732 is powered down and then press the Micro SD Card in with your thumb nail until the Micro SD Card clicks and releases.

9.0 MOUNTING THE KPT-732 ON YOUR WINDSCREEN

1. Insert the Mounts locking peg into the slot on the KPT-732.
2. Press the suction cup against the window with the locking mechanism turned to the unlock setting.
3. Apply firm pressure to the suction mount against the windscreen and turn the locking mechanism to the locked position.

 
NOTE:

- It is advised that the KPT-732 is installed in the centre of the windscreen behind the rear view mirror.
- Please ensure that you turn the locking mechanism to unlocked when attempting to remove the suction mount.
- When removing the suction mount be sure to pull from the rubber tag on the suction mount.

10.0 CONNECTING THE REAR CAMERA

To connect the rear camera please follow the instructions below.

1. Clean the space on the rear window that you want the rear camera positioned (it is advised that the camera is installed at the top of the rear window).
2. Remove the protective label from rear camera's adhesive sticker.
3. Press the rear camera's adhesive sticker onto your rear window on the desired mounting position.
4. Run the rear camera cable from the rear camera under your vehicles trim to the front of your vehicle.
5. Plug the rear camera plug into the camera port on the top of the KPT-732.

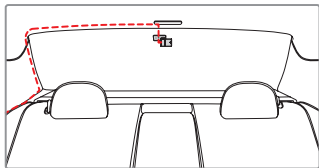

NOTE:

 
- Please ensure that this cable is correctly connected at both ends to ensure that correct operation.
- Please note that the rear camera is to be mounted inside the vehicle, it is NOT designed for installation on the outside of the vehicle.

11.0 CONNECTING YOUR KPT-732 TO POWER.

The KPT-732 is designed to be constantly powered by the included DC power supply.

To connect the KPT-732 to power please follow the instructions below.

1. Connect the USB Micro end of the Power cable to the KPT-732.
2. Run the cable around the edge of the lining if the windscreen being sure not to block any airbags and connect the DC power supply to the vehicle.

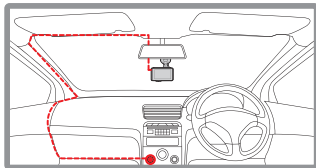

NOTES:

- The built in battery is designed for short use only. The battery cannot power the device long term, for everyday use please ensure that the Car Dash Cam is powered by the included Charger.
- If your vehicle has side curtain airbags please be very careful when running cables along your vehicles windows. Ensure you are not running cables past any of the airbags as this can prevent the airbags from deploying.

12.0 POWERING THE DEVICE ON/OFF

Once the vehicle engine is started, the device will automatically power up and start recording.

13.0 MANUAL POWER ON/OFF AND RESET

13.1 MANUAL POWER ON

Hold the Power button on the right side of the camera until the screen powers up.

13.2 POWER OFF

Hold the Power button on the left side of the camera until the camera powers off.

13.3 RESET THE DEVICE

To reset the KPT-732 use a flattened paper clip to press the reset button on the left of the underside of the camera.

13.4 INITIAL SETTINGS

Before using the Car Dash Cam, we recommend you set the correct Date and Time and adjust the G Sensor.

13.5 SET THE TIME AND DATE

To set the correct time and date, please follow the instructions below:

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Press the **Menu/Mode** Button again to enter the settings Menu.
4. Use the **Up** and **Down** buttons to navigate to the **Date/Time** Setting.
5. Press the **OK** button to confirm.
6. Use the **Up** and **Down** button to select the correct value and press the **OK** button to confirm and proceed to the next value.
7. Once you have adjusted all values, press the **OK** button to save the time and date, and exit to the menu.

NOTES:

- Please be aware the KPT-732's settings cannot be accessed while the camera is recording.

13.6 G-SENSOR SENSITIVITY

The onboard G-Sensor is used to detect when there is an impact to your vehicle and save the current clip from being recorded over.

To adjust the sensitivity of the G sensor please follow the instructions below.

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Use the **Up** and **Down** buttons to navigate to the **G-Sensor Sensitivity** Setting.
4. Press the **OK** button to confirm.
5. Use the **Up** and **Down** buttons to select your required sensitivity and press **OK** to confirm.

NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

14.0 USING THE CAR DASH CAM

14.1 RECORDING VIDEOS

14.1.1 RECORDING VIDEOS WHILE DRIVING

When the vehicle is started the Car Dash Cam will automatically turn on and start recording. During the Car Dash Cam's start up sequence the buttons and menus will be unresponsive.

Recording will automatically stop when the vehicle is powered off. To manually stop recording press the **OK** button.

NOTES:

- Because of how some vehicles are wired, the recording may continue when the engine is switched off. If this happens, please manually turn off the Car Dash Cam or remove the cigarette lighter adapter from the 12V power source when not in use.
- By default, the recording loop length is set to save a video file for every 3 minutes of recording. For information on how to adjust this setting please refer to the section of this manual named Movie Clip Time.
- The device saves the recording on the inserted Micro SD Card (not included). If the memory card capacity is full, the oldest file in the memory card is overwritten.

14.1.2 EMERGENCY RECORDING

Emergency Recording saves the current video file and protects it from being overwritten. To start the Emergency Recording, please follow the instructions below:

1. During video recording, press the **Up** button to enter emergency recording mode, the "Lock Current File" message will be shown on screen, and the recorded file will be protected.

NOTES:

- If the Collision Detection function is enabled and a collision is detected, the device will automatically trigger the emergency recording and protect the current video file.

14.1.3 RECORDING SCREEN

When the camera powers up the Recording screen will be displayed. This screen is used to start and stop recording as well as triggering emergency recording.

To access the KPT-732s menus press the **OK** button to stop recording and then press the **Menu/Mode** button to enter the Video menu. Pressing the **Menu/Mode** button again will put you in the Settings menu.

To access Photo mode, hold the **Menu/Mode** button for 2 seconds and then release and the camera will go into photo mode.

14.2 RESOLUTION

The Resolution setting is used to change the recording resolution.

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Use the **Up** and **Down** buttons to navigate to the Resolution Setting.
4. Press the **OK** button to confirm.
5. Use the **Up** and **Down** buttons to select your required resolution and press **OK** to confirm.

NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.
- Higher resolution recordings will create larger files which will take up more space on your Micro SD Card.

14.3 MOVIE CLIP TIME

The Movie clip setting is used to set your loop recording clip length.

To set your loop recording clip length please follow the instructions below.

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Use the **Up** and **Down** buttons to navigate to the **Movie Clip Time** Setting.
4. Press the **OK** button to confirm.
5. Use the **Up** and **Down** buttons to select your required clip length and press **OK** to confirm.

NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.
- We recommend that you set the clip length to the lowest setting to avoid filling your Micro SD Card up quickly with large files when the Emergency recording is triggered.

14.4 RECORD AUDIO

The Record audio setting is used to mute and unmute the KPT-732s microphone.

To set the microphone to mute or recording please follow the instructions below.

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Use the **Up** and **Down** buttons to navigate to the **Record Audio** Setting.
4. Press the **OK** button to confirm.
5. Use the **Up** and **Down** buttons to select On, to record audio, or Off to mute recordings and press **OK** to confirm.

NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

14.5 G-SENSOR SENSITIVITY

The onboard G-Sensor is used to detect when there is an impact to your vehicle and save the current clip from being recorded over.

To adjust the sensitivity of the G sensor please follow the instructions below.

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Use the **Up** and **Down** buttons to navigate to the **G-Sensor Sensitivity** Setting.
4. Press the **OK** button to confirm.
5. Use the **Up** and **Down** buttons to select your required sensitivity and press **OK** to confirm.

NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

14.6 WHITE BALANCE

White Balance is used to set the recording environment to balance the lighting.

White balance is set to auto by default, to manually adjust this setting please follow the instructions below.

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Use the **Up** and **Down** buttons to navigate to the **White Balance** Setting.
4. Press the **OK** button to confirm.
5. Use the **Up** and **Down** buttons to select your required setting and press **OK** to confirm.

NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

14.7 KEY BEEPS

The Key Beeps setting is used to mute the cameras key beeps.

To mute or unmute the Key Beeps please follow the instructions below.

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Press the **Menu/Mode** Button again to enter the settings Menu.
4. Use the **Up** and **Down** buttons to navigate to the **Key Beeps** Setting.
5. Press the **OK** button to confirm.
6. Use the **Up** and **Down** buttons to select On, to activate key beeps, or Off to mute the key beeps and press **OK** to confirm.

NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

14.8 DATE AND TIME

To set the correct time and date, please follow the instructions below:

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Press the **Menu/Mode** Button again to enter the settings Menu.
4. Use the **Up** and **Down** buttons to navigate to the **Date/Time** Setting.
5. Press the **OK** button to confirm.
6. Use the **Up** and **Down** button to select the correct value and press the **OK** button to confirm and proceed to the next value.
7. Once you have adjusted all values, press the **OK** button to save the time and date, and exit to the menu.

NOTES:

- Please be aware the KPT-732's settings cannot be accessed while the camera is recording.

14.9 DATE FORMAT

The Date Format setting is used to set the format that you would like the date displayed in.

To set your required date format please follow the instructions below.

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Press the **Menu/Mode** Button again to enter the settings Menu.
4. Use the **Up** and **Down** buttons to navigate to the **Date Format** Setting.
5. Press the **OK** button to confirm.
6. Use the **Up** and **Down** buttons to select your required date format and press **OK** to confirm.

NOTES:

- Please be aware the KPT-732's settings cannot be accessed while the camera is recording.

14.10 LANGUAGE

The Language setting is used to set your preferred setting.

To set your required language please follow the instructions below.

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Press the **Menu/Mode** Button again to enter the settings Menu.
4. Use the **Up** and **Down** buttons to navigate to the **Language** Setting.
5. Press the **OK** button to confirm.
6. Use the **Up** and **Down** buttons to select your required language and press **OK** to confirm.

NOTES:

- Please be aware the KPT-732's settings cannot be accessed while the camera is recording.

14.11 SCREEN SAVER

Screen saver turns the screen off after a few minutes of recording to avoid distractions. The camera will still be recording while the screen is off.

To set the screen saver

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Press the **Menu/Mode** Button again to enter the settings Menu.
4. Use the **Up** and **Down** buttons to navigate to the **Screen Saver** Setting.
5. Press the **OK** button to confirm.
6. Use the **Up** and **Down** buttons to select your required duration before the screen saver is activated and press **OK** to confirm.

NOTES:

- Please be aware the KPT-732's settings cannot be accessed while the camera is recording.

14.12 DEFAULT SETTINGS

To reset the cameras settings back to factory, please follow the instructions below.

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Press the **Menu/Mode** Button again to enter the settings Menu.
4. Use the **Up** and **Down** buttons to navigate to the **Default Settings** Setting.
5. Press the **OK** button to confirm.
6. Use the **Up** and **Down** buttons to select **YES** and press **OK** to confirm.

NOTES:

- Please be aware the KPT-732's settings cannot be accessed while the camera is recording.

14.13 FORMAT THE INSERTED MICRO SD CARD

It is suggested that you format your Micro SD Card before your initial use of the dash camera.

To format your Micro SD card please follow the instructions below.

1. If the camera is recording, press the **OK** button to stop the camera recording.
2. Press the **Menu/Mode** Button to enter the Video Menu.
3. Press the **Menu/Mode** Button again to enter the settings Menu.
4. Use the **Up** and **Down** buttons to navigate to the **Format** Setting.
5. Press the **OK** button to confirm.
6. Use the **Up** and **Down** buttons to select **YES** and press **OK** to confirm.

NOTES:

- Please be aware the KPT-732's settings cannot be accessed while the camera is recording.
- Please ensure you do not have any important information on your Micro SD Card before formatting it as data will not be able to be recovered once it is formatted.

15.0 PHOTO MODE

To access Photo mode, hold the **Menu/Mode** button for 2 seconds and then release and the camera will go into photo mode.

When in Photo mode the **OK** button is used to take a picture.

Quickly pressing the **Menu/Mode** button will take you to the Photo Menu where the **Up** and **Down** buttons are used to navigate the menu and the **OK** button is used to select and confirm.

16.0 PLAYBACK

To access playback mode hold the **Menu/Mode** button for 2 seconds and then release and the camera will go into photo mode. Press and hold the **Menu/Mode** button for another 2 seconds and release and the camera will now be in playback mode.

In Playback mode use the **Up** and **Down** buttons to navigate the recorded files and the **OK** button to select and play video files.

When a file is selected you can delete the file by pressing the **Menu/Mode** button and then selecting Delete.

16.1 PC PLAYBACK

When playing back video files on your PC please remove your Micro SD Card (not included) from the KPT-732 and connect it to your PC using a Micro SD Card reader.

For best results transfer the video files from the Micro SD Card to your PC's local storage before attempting playback.

16.2 MENUS

VIDEO	Resolution	1080P
		720P
	Movie Clip Time	Off
		3 min
		5 min
		10 min
	Record Audio	Off
		On
	G-Sensor Sensitivity	Off
		Low
		Middle
		High

VIDEO	White Balance	Auto
		Daylight
		Cloudy
		Fluoresc.

MENUS CONTINUED

SETTINGS	Beep Sound	On
		Off
	Date Time	Set The date and Time
	Date Format	YYYY MM DD
		MM DD YYYY
		DD MM YYYY
	Date Stamp	Off
		Date
	Language	Set your preferred Language
Frequency	50Hz	
	60Hz	

SETTINGS	Screen Savers	Off
		1 min
		3 min
	Default Setting	Reset to default
	Format	Format the inserted Micro SD card
	Version	Display version number

MENUS CONTINUED

PHOTO	Resolution	3M
		2M
		1.2M
		VGA
	Quality	Super Fine
		Fine
	White Balance	Auto
		Daylight
		Cloudy
		Fluoresc.
	ISO	Auto
		100
		200
		400

17.0 WARRANTY TERMS & CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian & New Zealand Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian & New Zealand Consumer Law.

Kapture warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Kapture.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect.

In order to claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Kapture. Kapture will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. All costs involved in claiming this warranty, including the cost of the retailer sending the product to Kapture, will be borne by you.

Directed Electronics Address:

44 Translink Drive, Keilor Park Victoria Australia 3042

Ph: +61 03 8331 4800

Email: service@kapturecam.com.au

YOUR EYEWITNESS ON THE ROAD™



www.kapturecam.com.au
www.kapturecam.co.nz



All Images, Information and Content are Copyright © 2018
Directed Electronics Australia Pty Ltd. All Rights Reserved.



www.directed.com.au
www.directed.co.nz