



KPT-782

**FULL HD DUAL CHANNEL DASH CAMERA
WITH HD REAR CAMERA AND 4" TOUCH SCREEN**



USER MANUAL

YOUR EYEWITNESS ON THE ROAD™



CONTENTS

1.0 CAUTION.....	6
1.1 BATTERY WARNING	7
1.2 FEATURES.....	9
1.3 PRODUCT INFORMATION.....	9
2.0 INTRODUCTION.....	9
2.1 PACKAGE CONTENTS	10
2.2 PRODUCT OVERVIEW	11
3.0 GETTING STARTED	12
3.1 INSERTING YOUR MICRO SD CARD.....	12
3.2 REMOVING YOUR MICRO SD CARD	12
4.0 MOUNTING THE KPT-782 ON YOUR WINDSCREEN	13
4.1 INSTALLING THE REAR CAMERA.....	14
4.2 CONNECTING YOUR REAR CAMERA.....	15

4.3	CONNECTING YOUR KPT-782 TO POWER	16
4.4	POWERING THE DEVICE ON/OFF	16
5.0	MANUAL POWER ON/OFF AND RESET	17
5.1	MANUAL POWER ON.....	17
5.2	POWER OFF	17
5.3	RESET THE DEVICE	17
6.0	INITIAL SETTINGS	17
6.1	SET THE TIME AND DATE	18
6.2	SET YOUR LICENCE PLATE	19
6.3	FORMATTING THE INSERTED MICRO SD CARD	20
7.0	USING THE CAR DASH CAM.....	21
7.1	RECORDING VIDEOS	21
7.1.1	RECORDING VIDEOS WHILE DRIVING	21
7.1.2	EMERGENCY RECORDING	22

7.1.3	RECORDING SCREEN	23
7.1.4	REVERSING MODE	23
7.2	RESOLUTION.....	24
7.3	DUAL	24
7.4	CYCLE	25
7.5	HDR.....	26
7.6	EXPOSURE.....	27
7.7	MOTION DETECTION.....	28
7.8	G-SENSOR SENSITIVITY	29
7.9	SOUND.....	30
7.10	SCREEN SAVER	31
7.11	PARK MODE.....	32
7.12	KEY BEEPS.....	33
8.0	LANGUAGE.....	34
8.1	FORMATTING THE INSERTED MICRO SD CARD	34

9.0	SET YOUR LICENCE PLATE.....	36
9.1	DEFAULT SETTINGS	37
9.2	PLAYBACK.....	38
9.3	PC PLAYBACK	38
10.0	MENUS	39
11.0	WARRANTY TERMS & CONDITIONS	41
12.0	NOTES	43

1.0 CAUTION

- Ensure you are using your Car Dash Cam within your countries' road laws. Please make sure you are familiar with your local road legislation before use.
- Avoid leaving your Dash Cam in direct sunlight for extended periods of time in an unventilated space.
- Please set time and date before you use this device to record.
- The notifications given by the Car Dash Cam are suggestions only, please drive to the actual conditions.
- The values displayed in this system, such as speed, position, and the distance warning, may be affected by the surrounding environment.
- The system is to be used only for non-commercial use, within the limits permitted by the relevant laws.
- Avoid using the Car Dash Cam near any devices that emit radio interference (e.g. Microwave Ovens).
- It is considered normal operation for the Car Dash Cam to get warm during use.

1.1 BATTERY WARNING

- Always charge the Car Dash Cam using the provided charger. Improper charging of the Car Dash Cam and may result in failure of the internal battery.
- Never dismantle the Car Dash Cam or expose the internal battery.
- Do not dispose of the Car Dash Cam in fire.
- Dispose of the Car Dash Cam observing local regulations being mindful of the internal battery.
- Do not attempt to replace or expose the internal battery.

NOTES ON INSTALLATION

- It is advised that the Car Dash Cam is installed near the rear view mirror, at the top centre of the windshield for optimal operation.
- Make sure that the lens is within the range of the windscreen wiper to ensure a clear view when it rains.
- Do not touch the lens with your fingers. Finger prints left on the lens will result in unclear videos or photos. If photos or videos are blurred, please clean the lens gently with a microfibre cloth.
- Do not install the device on a tinted window. Doing so may damage the tint film.
- Make sure that the installation position does not hinder or block the field of view.
- Only use the included cable to power the Car Dash Cam.
- The KPT-782 is designed to be constantly connected to the included power supply and is NOT designed to be used solely with the camera's built in battery.

1.2 FEATURES

- 1080P Full HD front facing camera recording
- 720P HD rear facing camera recording
- Parkmode
- Up to 32GB Card Capacity (Micro SD Card not included)
- 4.0" LCD touch screen
- Automatic Emergency recording when a collision is detected
- 150° Wide angle lens (front camera)

1.3 PRODUCT INFORMATION

For latest manual and product updates please visit our website at www.kapturecam.com.au or www.kapturecam.co.nz

 
2.0 INTRODUCTION

Thank you for purchasing a Kapture Car Dash Cam. Please read through these instructions before attempting to install or use this product.

2.1 PACKAGE CONTENTS




Dash
Camera




Rear
Camera



 6m Rear
Camera Cable



DC Power
Cable

 

User
Manual

2.2 PRODUCT OVERVIEW



1. Power Button
2. Power Port
3. Micro SD Card Slot
4. Rear camera port

5. Mounting Sticker
6. Lens
7. 4.0" Touch screen

3.0 GETTING STARTED

3.1 INSERTING YOUR MICRO SD CARD

With the screen view towards you, insert your Micro SD Card with the pins facing toward you. Push the memory card in until you hear a click locking the Micro SD Card in Position.

NOTES:

 
- Do not remove or insert the Micro SD Card when the device is turned on. This may damage your Micro SD Card.
- Please use a Class 6 or higher rated Micro SD card, 16GB or above (up to 32GB).
- Please format the Micro SD card before the initial use.
- Micro SD Card not included.

3.2 REMOVING YOUR MICRO SD CARD

Ensure that the KPT-782 is powered down and then press the Micro SD Card in with your thumb nail until the Micro SD Card clicks and releases.

4.0 MOUNTING THE KPT-782 ON YOUR WINDSCREEN

1. Clean your desired mounting position with glass cleaner and ensure that the glass is dry.
2. Remove the protective sticker from the mounting sticker.
3. Stick the camera in the desired mounting position ensuring that the lens is facing forward.
4. Press the camera into position for 20 seconds.




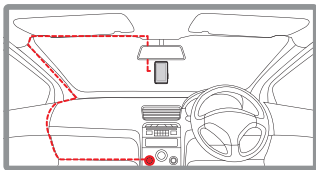



NOTE:

- It is advised that the KPT-782 is installed in the centre of the windscreen behind the rear view mirror.

4.1 INSTALLING THE REAR CAMERA

To install the rear camera please follow the instructions below.

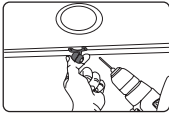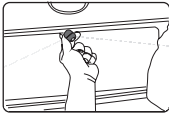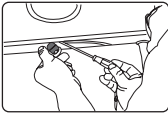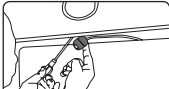1. Select a flat and centred location near the number plate lamp at the rear of the vehicle to mount camera.
2. Attach tape to the bracket of the camera to hold the camera in position while installing, and drill two small holes, one for the first screw, the second to run the reverse camera cable through. 
3. Use a screw driver to fix the first screw, leaving the screw loose enough to adjust the camera.
4. Insert the camera wire through the intended drilled hole checking the installation position. 
5. Mark the position suitable for the second screw and drill a small hole for it.
6. Fix the second screw and securely tighten both screws. 

4.2 CONNECTING YOUR REAR CAMERA

The KPT-782s rear camera is also used as a reverse camera. To use this function your vehicle's reverse light is used as a trigger to activate the reverse screen. To connect your rear camera please follow the instructions below.

1. The Rear Camera cable will have a red cable on the rear end of the cable. This red cable is used to connect to your vehicles reverse light.
2. Connect the red cable to your vehicles reverse power (please note all vehicles are different and their reverse lights are accessed differently, to find out how your vehicles reverse lights are wired please refer to your vehicles owners guide or consult an auto electrician).
3. Run the cable along the roof lining of your vehicle towards the front of your vehicle.
4. Connect the 3.5mm connection to the Rear Camera connection on the right side of the camera.

NOTES:

- If the red rear camera cable is not connected correctly the reverse feature will not work.

4.3 CONNECTING YOUR KPT-782 TO POWER

The KPT-782 is designed to be constantly powered by the included DC power supply.

To connect the KPT-782 to power please follow the instructions below.

1. Connect the USB Mini end of the Power cable to the KPT-782.
2. Run the cable around the edge of the lining if the windscreen being sure not to block any airbags and connect the DC power supply to the vehicle.

NOTES:

- The built in battery is designed for short use only. The battery cannot power the device long term, for everyday use please ensure that the Car Dash Cam is powered by the included Charger.
- If your vehicle has side curtain airbags please be very careful when running cables along your vehicles windows. Ensure you are not running cables past any of the airbags as this can prevent the airbags from deploying.

4.4 POWERING THE DEVICE ON/OFF

Once the vehicle engine is started, the device will automatically power up and start recording.

5.0 MANUAL POWER ON/OFF AND RESET

5.1 MANUAL POWER ON

Hold the Power button on the left side of the camera until the screen powers up.

5.2 POWER OFF

Hold the Power button on the left side of the camera until the camera powers off.

5.3 RESET THE DEVICE





To reset the KPT-782 use a flattened paperclip to press the reset button on the right of the underside of the camera.

6.0 INITIAL SETTINGS

Before using the Car Dash Cam, we recommend you set the correct Date and Time, Number Plate and format the inserted Micro SD Card.

6.1 SET THE TIME AND DATE

To set the correct time and date, please follow the instructions below:





1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Date/Time** setting.
4. Swipe the value you want to update up or down to adjust each value.
5. Once the correct time and date has been set tap **CONFIRM** to save.
6. Once saved tap the  button to return to the recording screen.
7. Tap the  to enter the Camera Menu.
8. Tap the **Watermark** setting.
9. Tap **Open** or **Close** to activate or deactivate the watermark on the recorded footage.

NOTES:

- Please be aware the KPT-782's settings cannot be accessed while the camera is recording.
- Once you have set the time and date you need to make sure the watermark is active for it to be stamped onto recorded footage.

6.2 SET YOUR LICENCE PLATE

To watermark your vehicles number plate on your footage please follow the instructions below.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Licence** setting.
4. In this screen you can insert up to 8 characters, select the first field in the top left and then select your required character. Select the second field and then tap the correct character, continue this until you have entered your licence plate number then tap **CONFIRM** to save.
5. Once saved tap the  button to return to the recording screen.
6. Tap the  to enter the Camera Menu.
7. Tap the **Licence** setting.
8. Tap **Open** or **Close** to activate or deactivate the watermark on the recorded footage.

NOTES:




- Please be aware the KPT-782's settings cannot be accessed while the camera is recording.
- Once you have set your licence plate number you need to make sure the watermark is active for it to be stamped onto recorded footage.

6.3 FORMATTING THE INSERTED MICRO SD CARD

It is suggested that you format the inserted Micro SD Card once every few months.

Formatting the Micro SD Card will delete all data on the Micro SD Card, please ensure that you have no important information on the Micro SD Card before formatting.

To format the Micro SD Card, please follow the instructions below.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Format** setting.
4. Tap **CONFIRM** to proceed.
5. Tap the  button to return to the recording screen.

NOTES:

- Please be aware the KPT-782's settings cannot be accessed while the camera is recording.
- Please ensure you do not have any important information on your Micro SD Card before formatting it as data will not be able to be recovered once it is formatted.

7.0 USING THE CAR DASH CAM**7.1 RECORDING VIDEOS****7.1.1 RECORDING VIDEOS WHILE DRIVING**

When the vehicle is started the Car Dash Cam will automatically turn on and start recording. During the Car Dash Cam's start up sequence the buttons and menus will be unresponsive.



Recording will automatically stop when the vehicle is powered off. To manually stop recording press the **OK** button.

NOTES:

- Because of how some vehicles are wired, the recording may continue when the engine is switched off. If this happens, please manually turn off the Car Dash Cam or remove the cigarette lighter adapter from the 12V power source when not in use.
- By default, the recording loop length is set to save a video file for every 1 minute of recording. For information on how to adjust this setting please refer to the section of this manual named Cycle.
- The device saves the recording on the inserted Micro SD Card (not included). If the memory card capacity is full, the oldest file in the memory card is overwritten.

7.1.2 EMERGENCY RECORDING

Emergency Recording saves the current video file and protects it from being overwritten. To start the Emergency Recording, please follow the instructions below:

1. During video recording, tap the  button to enter emergency recording mode, the  icon will be displayed in the top left indicating that the current recording is locked.

NOTES:

- If the Collision Detection function is enabled and a collision is detected, the device will automatically trigger the emergency recording and protect the current video file.

7.1.3 RECORDING SCREEN

When the camera powers up the Recording screen will be displayed. This screen is used to start and stop recording as well as triggering emergency recording.

To access the KPT-782s menus press the  button to stop recording and then tap the  button to enter the Settings Menu or tap the  button to enter the Camera Menu.

To take a Photo stop recording by tap the  button and then tap the  button.



7.1.4 REVERSING MODE

When installed correctly the KPT-782 will detect when your vehicle's reverse gear is selected and will display the rear camera feed on screen.

While the reverse feed is displayed on screen the camera will continue recording.

7.2 RESOLUTION

The Resolution setting is used to change the recording resolution.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Resolution** setting.
4. Tap your required resolution to proceed.

NOTES:


- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.
- Higher resolution recordings will create larger files which will take up more space on your Micro SD Card.

7.3 DUAL

The Dual setting is used to activate and deactivate the rear camera.

To set the rear camera please follow the instructions below.



1. If the camera is recording, tap the  button to stop the camera recording.

2. Tap the  Button to enter the Settings Menu.
3. Tap the **Dual** setting.
4. Tap **Open** or **Close** to activate or deactivate the rear camera.

7.4 CYCLE

The Cycle setting is used to set your loop recording clip length.

To set your loop recording clip length please follow the instructions below.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Cycle** setting.
4. Tap your required loop recording length.



NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.
- We recommend that you set the clip length to the lowest setting to avoid filling your Micro SD Card up quickly with large files when the Emergency recording is triggered.

7.5 HDR

HDR is used to brighten dark parts of your footage as well as darken overly light footage.

To activate HDR please follow the instructions below.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **HDR** setting.
4. Tap **Open** or **Close** to activate or deactivate HDR.



NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

7.6 EXPOSURE

The Exposure setting is used to adjust the amount of light coming in from the lens.

To set the exposure level please follow the instructions below.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Exposure** setting.
4. Tap the - or + value that you to set.



NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

7.7 MOTION DETECTION

Motion detection stops recording when no movement is detected in front of your vehicle.

To adjust the sensitivity of the G sensor please follow the instructions below.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Motion** setting.
4. Tap **Open** or **Close** to activate or deactivate Motion Detection.



NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

7.8 G-SENSOR SENSITIVITY

The onboard G-Sensor is used to detect when there is an impact to your vehicle and save the current clip from being recorded over.

To adjust the sensitivity of the G sensor please follow the instructions below.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Gravity** setting.
4. Tap your required sensitivity to set.



NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

7.9 SOUND

The Sound setting is used to mute and unmute the KPT-782s microphone.

To set the microphone to mute or recording please follow the instructions below.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Sound** setting.
4. Tap **Open** or **Close** to activate or deactivate the microphone.



NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

7.10 SCREEN SAVER

Screen saver turns the screen off after a few minutes of recording to avoid distractions. The camera will still be recording while the screen is off.

To set the screen saver

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Protection** setting.
4. Tap your required duration before the screen saver becomes active.



NOTES:

- Please be aware the KPT-782's settings cannot be accessed while the camera is recording.

7.11 PARK MODE

Park mode monitors for collisions when your vehicle is parked and starts recording when an impact is detected

To set Park Mode please follow the instructions below.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Guard** setting.
4. Tap **Open** or **Close** to activate or deactivate Park Mode.



NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

7.12 KEY BEEPS

The Key Beeps setting is used to mute the cameras key beeps.

To mute or unmute the Key Beeps please follow the instructions below.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Key Sound** setting.
4. Tap **Open** or **Close** to activate or deactivate Key Beeps.



NOTES:

- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

8.0 LANGUAGE

The Language setting is used to set your preferred setting.

To set your required language please follow the instructions below.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Language** setting.
4. Tap your required Language.

NOTES:




- Menus cannot be accessed if the camera is recording, please ensure that the camera is not recording before attempting to access the menu.

8.1 FORMATTING THE INSERTED MICRO SD CARD

It is suggested that you format the inserted Micro SD Card once every few months.

Formatting the Micro SD Card will delete all data on the Micro SD Card, please ensure that you have no important information on the Micro SD Card before formatting.

To format the Micro SD Card, please follow the instructions below.





1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Format** setting.
4. Tap **CONFIRM** to proceed.
5. Tap the  button to return to the recording screen.

NOTES:

- Please be aware the KPT-782's settings cannot be accessed while the camera is recording.
- Please ensure you do not have any important information on your Micro SD Card before formatting it as data will not be able to be recovered once it is formatted.

9.0 SET YOUR LICENCE PLATE

To watermark your vehicles numberplate in on your footage please follow the instructions below.



1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Licence** setting.
4. In this screen you can insert up to 8 characters, select the first field in the top left and then select your required character. Select the second field and then tap the correct character, continue this until you have entered you licence plate number then tap **CONFIRM** to save
5. Once saved tap the  button to return to the recording screen.
6. Tap the  to enter the Camera Menu.
7. Tap the **Licence** setting.
8. Tap **Open** or **Close** to activate or deactivate the watermark on the recorded footage.

NOTES:

- Please be aware the KPT-782's settings cannot be accessed while the camera is recording.
- Once you have set your licence plate number you need to make sure the watermark is active for it to be stamped onto recorded footage.

9.1 DEFAULT SETTINGS


To reset the cameras settings back to factory, please follow the instructions below.

1. If the camera is recording, tap the  button to stop the camera recording.
2. Tap the  Button to enter the Settings Menu.
3. Tap the **Default** setting.
4. Tap **CONFIRM** to proceed.

NOTES:

- Please be aware the KPT-782's settings cannot be accessed while the camera is recording.

9.2 PLAYBACK

To access playback mode tap the  button and the camera will go into playback mode.

In Playback mode use the **Up** and **Down** buttons to navigate the recorded files and tap the required file to enter then tap the required video to playback.

9.3 PC PLAYBACK

When playing back video files on your PC please remove your Micro SD Card (not included) from the KPT-782 and connect it to your PC using a Micro SD Card reader.

For best results transfer the video files from the Micro SD Card to your PC's local storage before attempting playback.

10.0 MENUS

SETTINGS MENU	Protection	Close
		30 Seconds
		60 Seconds
		120 Seconds
	Shut Down	Close
		1 Minutes
		3 Minutes
		5 Minutes
	Frequency	50Hz
		60Hz
	Key Sound	Close
		Open
	Language	Select Language

SETTINGS MENU	Date/Time	Set The Current Time and Date
	Licence	Enter your Licence Plate number
	Format	Format the inserted Micro SD Card
	Default	Reset to the Default Settings
	Version	Display the firmware version number

MENU CONTINUED

CAMERA MENU	Resolution	1080P
		720P
		480P
	Dual	Open
		Close
	Cycle	Close
		1 Mins
		3 Mins
		5 Mins
	Interval	Close
		100ms
		200ms
		500ms

CAMERA MENU	HDR	Close
		Open
	Exposure	-3
		-2
		-1
		0
		+1
		+2
	Motion	+3
		Close
	Watermark	Open
		Close
	Watermark	Close
Open		

CAMERA MENU	Gravity	Close
		Low
		Medium
		High
	Sound	Close
		Open
	Guard	Close
		Open
	Licence	Close
		Open

11.0 WARRANTY TERMS & CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian & New Zealand Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian & New Zealand Consumer Law.

Kapture warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Kapture.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect.

In order to claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Kapture. Kapture will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. All costs involved in claiming this warranty, including the cost of the retailer sending the product to Kapture, will be borne by you.

Directed Electronics Address:

44 Translink Drive, Keilor Park Victoria Australia 3042

Ph: +61 03 8331 4800

Email: service@kapturecam.com.au

12.0 NOTES

YOUR EYEWITNESS ON THE ROAD™



www.kapturecam.com.au
www.kapturecam.co.nz



All Images, Information and Content are Copyright © 2018
Directed Electronics Australia Pty Ltd. All Rights Reserved.



www.directed.com.au
www.directed.co.nz